

GNSS RTK BASE STATION

REQUIREMENTS FOR INSTALLATION



REQUIREMENTS FOR THE INSTALLATION SITE

- The customer must provide a place for mounting a pipe with a diameter of 25-30 mm. Or independently fix the pipe, to which the base station will be attached in the future at the place of possible installation.
- The pipe should be 1-1.5 meters above the surface.
- Bring the network with a voltage of 220V at a distance of no more than 10m from the base station.
- Provide the name of the mobile operator that works best at the installation location.




THE INSTALLATION PROCEDURE

- Attach the pipe with 5/8" thread to the prepared pipe at the installation site.
- Screw the base station onto the pipe with 5/8" thread.
- Connect the power cable to the base station and tighten the tightening nut on the connector.
- Connect the power supply to a 220V socket and protect from moisture.
- Turn on the button on the base station, the red LED on the panel will light up.
- During charging, the red indicator on the power supply unit lights up, after charging and in constant use mode, the green indicator lights up.
- The base is ready to work.

POSSIBLE MOUNTING OPTIONS



SUPPORT CONTACTS

-  +38-050-842-61-65 (Viber, WhatsApp, Telegram)
-  office@geometer.com.ua
-  www.gpsgeometer.com/en